


FIG.18 HANDLE SWITCH

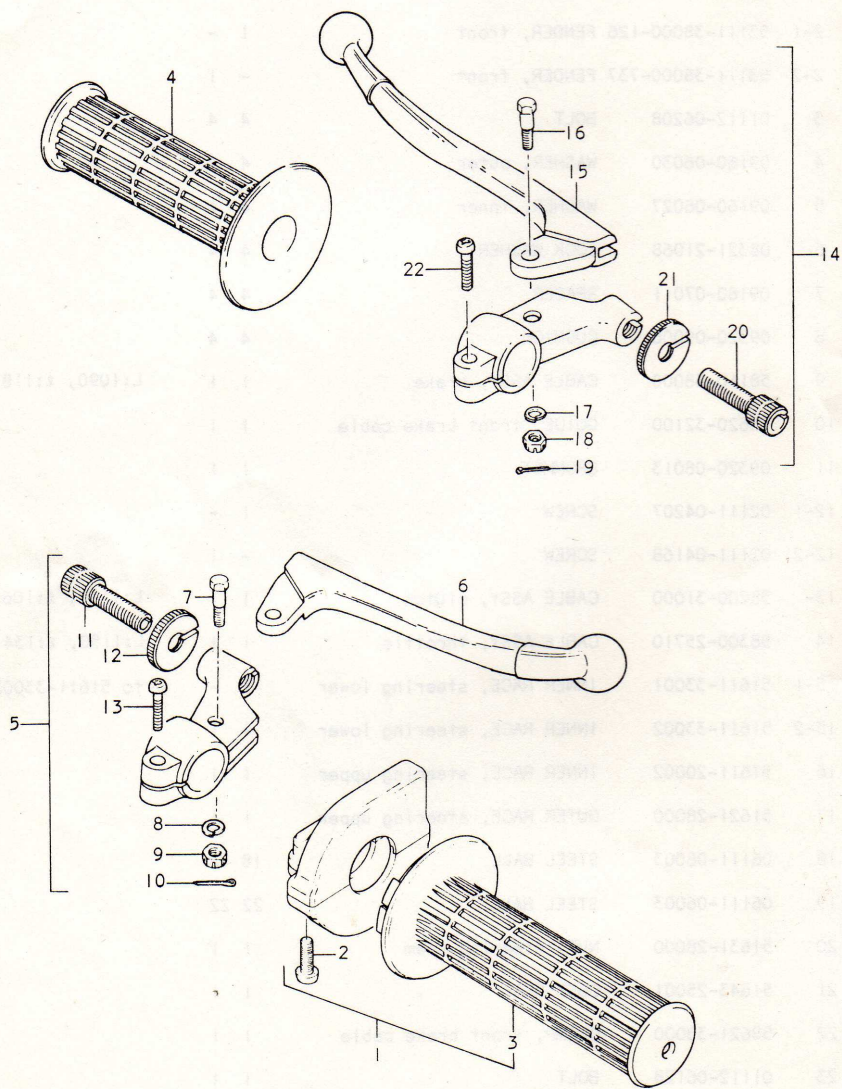

RL250

FIG.18 HANDLE SWITCH

| Ref.No. | Part No. | Description | Q'ty | | Remarks |
|---------|-------------|---------------------|------|---|----------------|
| | | | L | M | |
| 1 | 57100-26110 | GRIP ASSY, throttle | 1 | 1 | |
| 2 | 02112-05168 | •SCREW | 2 | 2 | |
| 3 | 57110-26110 | •GRIP, throttle | 1 | 1 | |
| 4 | 57211-25700 | GRIP, LH | 1 | 1 | |
| 5 | 57300-11011 | LEVER ASSY, brake | 1 | 1 | |
| 6 | 57420-18011 | •LEVER | 1 | 1 | |
| 7 | 57431-11010 | •BOLT | 1 | 1 | |
| 8 | 08321-21068 | •LOCK WASHER | 1 | 1 | |
| 9 | 57433-11010 | •NUT | 1 | 1 | |
| 10 | 04111-16158 | •COTTER PIN | 1 | 1 | |
| 11 | 57441-11010 | •ADJUSTER, cable | 1 | 1 | |
| 12 | 57442-11010 | •NUT | 1 | 1 | |
| 13 | 02112-06208 | •SCREW | 1 | 1 | |
| 14 | 57500-11011 | LEVER ASSY, clutch | 1 | 1 | |
| 15 | 57620-31010 | •LEVER | 1 | 1 | |
| 16 | 57431-11010 | •BOLT | 1 | 1 | |
| 17 | 08321-21068 | •LOCK WASHER | 1 | 1 | |
| 18 | 57433-11010 | •NUT | 1 | 1 | |
| 19 | 04111-16158 | •COTTER PIN | 1 | 1 | |
| 20 | 57441-11010 | •ADJUSTER, cable | 1 | 1 | |
| 21 | 57442-11010 | •NUT | 1 | 1 | |
| 22-1 | 57451-11010 | •SCREW | 1 | - | to 01112-06208 |
| 22-2 | 01112-06208 | •BOLT | - | 1 | |

RL250